

## Common Mistakes



1. Shade Tab incisal edge up  
Open Bite.



2. Highlight from Big Window.  
Shade Tab incisal edge up.



3. Tooth to match is being covered.



4. Glare on Shade Reference; to fix,  
increase tilt of Shade Reference.



5. Wrong tooth being matched.  
Matching the temporaries.



6. Too much highlight on teeth.  
Insert Shade Tab. Increase angle  
of the camera to the teeth.



7. Needs camera flash. Too far away.



8. Over exposed. Need Shade tab.

**Important Note: ShadeWave offers expert help with camera issues.**

**Contact: [Support@shadwave.com](mailto:Support@shadwave.com) or call 425.557.7788.**

Copyright 2015. Do not duplicate without permission of ShadeWave, LLC. 10/28/15